a little big tool Plasma Pipette

User's Manual

CONTENS

Main & Parts	14
Function	15
How to use	16
Gas use & Tip Selection	18
Type Selection & Specification	19
Precautions	20
Warranty & A/S	21





Main & Parts



Plasma Pipette & AC Adapter



Extension Tube (OD, 4mm)



Power Cable



S Type Tip set (A, B, C)







Plasma Pipette Case



User's Manual

Function



How to use

After use, please turn off the power switch and unplug the power cord.



Connection

Plug the power cable in.



Gas supply


Connect Extension tube to the gas-in port. Connect Extension tube to a gas tank.



Tip assembly

Select the right Tip depending on your purpose.



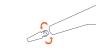







Turn on

Press the main switch for 2 seconds to power on the product.





Plasma power control

Set plasma power by selection L, M, or H using power control buttons.





Plasmas-On

When the 'Plasma On switch' is pressed (pushed), the gas is released immediately and the plasma generation is followed after 0.5 seconds





Fnd

Releasing the Push Switch, gas tube will be closed, and plasma spraying will be stopped. Press the Power Button at least 3 seconds to turn the device off



Gras use

We Recommend using Argon as the main gas. Do not use any explosive or corrosive gases with the Plasma Pipette.

Tip Selection

S-Type Tip & F-Type Tip


Sinale-use

* Recommend replacement after use

S-Type Tip



converging tip (smaller treating area, denser)

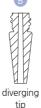





F-Type Tip



Type Selection

F Type

S Type Conductor (including semiconductor) is not allowed, High performance in closed space. Ex) tube, micro channel, etc.

All materials are allowed.

Specification

Material	Plastic, Metal		
AC Adapter Input	100-240V ~ 50/60Hz 1.2A Max	AC Adapter Output	5V, 4A
Body size	52(W) x 76(D) x 270(H) mm	Box size	310(W) x 80(D) x 85(H) mm
Power Cable Length	10.2 inch	Weight	0.8 lb

Precautions Be sure to read the instructions and precautions before using.

- 1. Keep away from plasma discharge which may result in a burn, or bodily injury.
- 2. It is recommended to use in a well ventilated laboratory.
- 3. Take care there are no gas leaks. We are not responsible for any problems cause by gas connection issues.
- 4. Use an appropriate gas cylinder and pressure regulator to provide the correct gas flow and monitor gas usage.
- 5. We are not responsible for the situation when using the device without following (our) the manual.
 6. Do not operate without gas supply.
- 7. Self-repairs and any modifications are prohibited.
- 20

Warranty & A/S

Warranty

If there is a problem with the operation of the product within 1 year of purchase, free repair is provided.



- 1. When the warranty period has expired.
- 2. When disassembling and reassembling a product.
- 3. Intentionally breaking the Plasma Pipette voids the warranty.



